


## INSTRUCTION MANUAL

# Power Factor Controller RVC

## Quick start

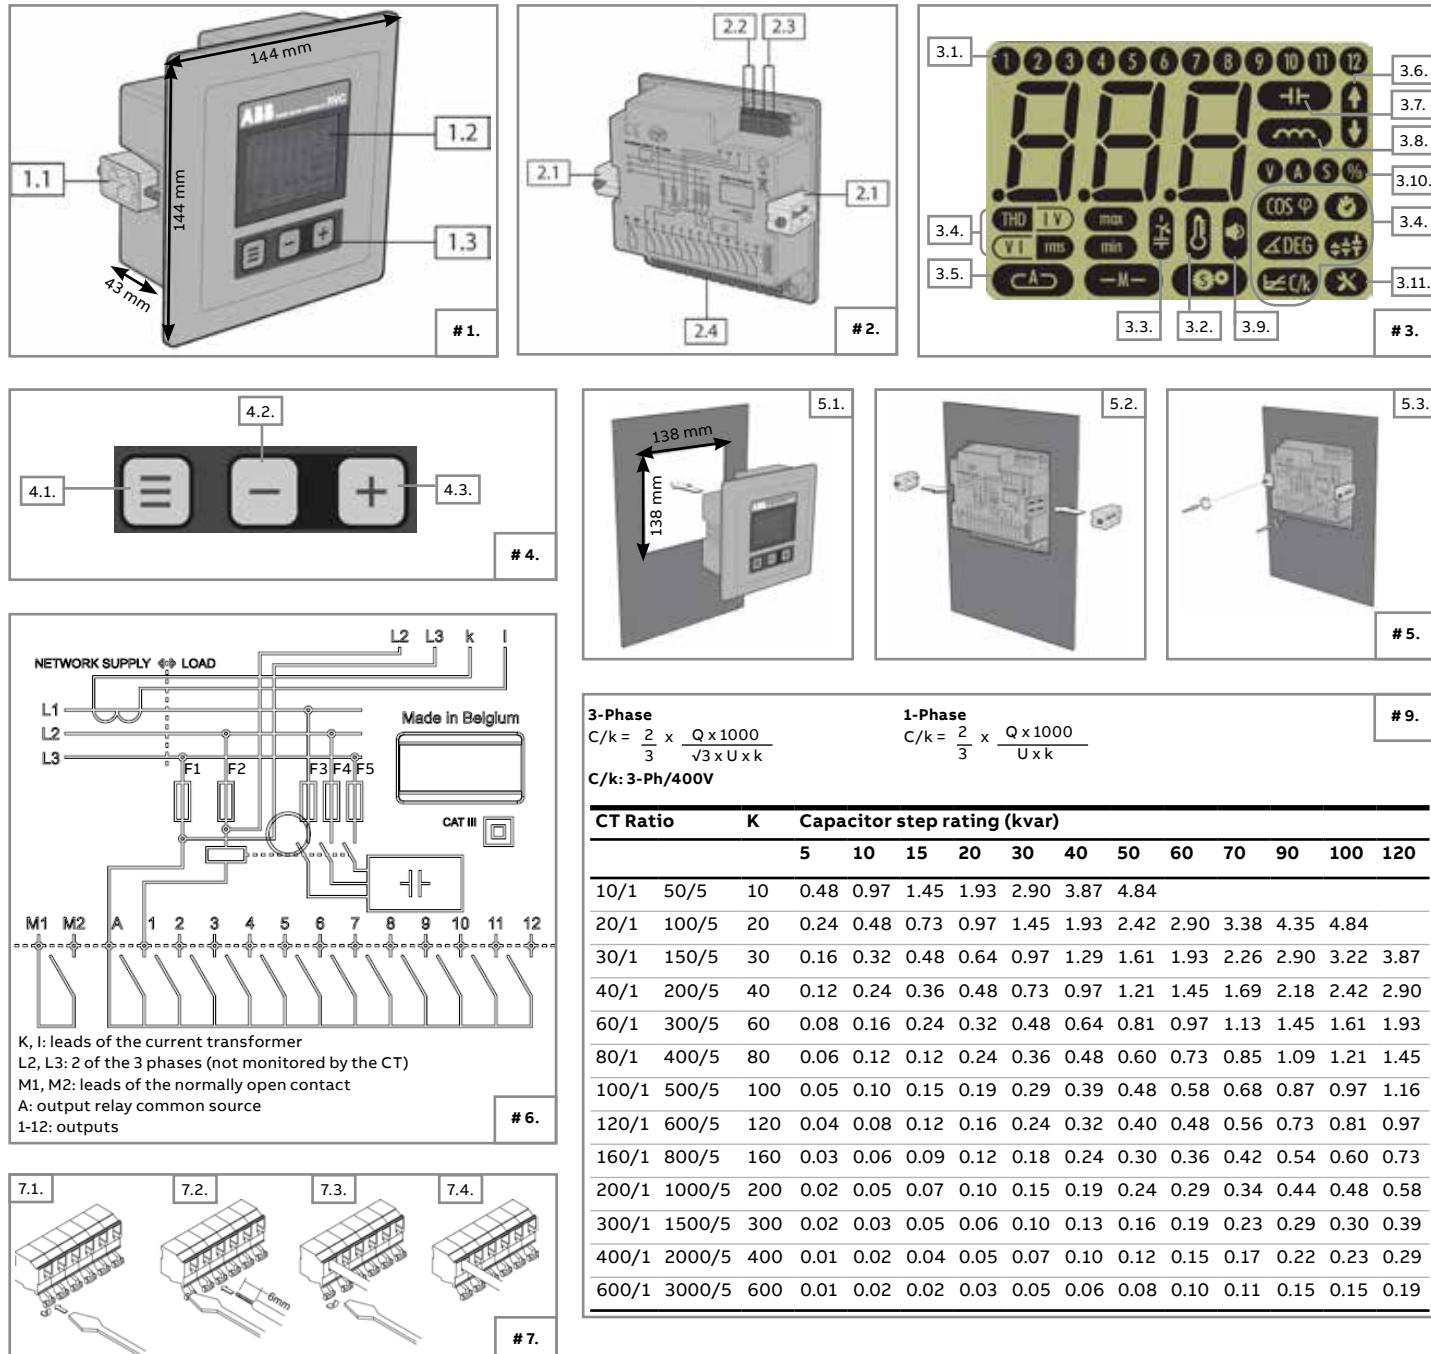

QR code to download the manual

Linear						Circular					
C1	C2	C3	C4	C11	C12	C1	C2	C3	C4	C11	C12
+	+	+	+	+	+	+	+	+	+	+	+
Sequence 1	1	1	1	1	1	Sequence 1	1	1	1	1	1
↗	█	□	□	□	...	↗	█	□	□	...	□
↗	█	█	□	□	...	↗	█	█	□	...	□
↗	█	█	█	□	...	↗	█	█	█	□	...
↘	█	█	█	█	...	↘	█	█	█	█	...
↘	█	█	█	█	...	↘	█	█	█	█	...
↙	█	█	█	█	...	↙	█	█	█	█	...
↙	█	█	█	█	...	↙	█	█	█	█	...

#8.



